

Central Heating Controls



Your lodge is fitted with a Google Nest heating thermostat. **Do not adjust anything on the boiler.**

The thermostat is situated in the lounge and looks like this



Current room temperature

Temperature that will trigger the heating coming on.

To **increase** the temperature of the lodge and allow the radiators to heat up you need to turn the outside ring of the thermostat **clockwise**. The large number in the middle will increase.



To **decrease** the set temperature then turn the outside ring of the thermostat **anticlockwise**. The large number in the middle will decrease.



When leaving the lodge please turn the heating to 15 degrees