

Instruction Manual Spring Lodge



Welcome to Spring Lodge

Thank you for booking with us to stay in Spring Lodge.

This pack is designed to help you use the appliances in the unit.

General instructions are also found in our house manual here https://thecotswoldretreats.com/house-manuals

The Blinds in the main bedroom and kitchen are electric so please use the remote controls to operate these.

Instructions for use

WASHER-DRYER



! This symbol reminds you to read this booklet.



English,1

IWDC 6125

Contents

Installation, 2-3-4-5

Unpacking and levelling Connecting the electricity and water supplies The first wash cycle Technical data

Description of the washer-dryer and starting a wash cycle, 6-7

Control panel Indicator lights Starting a wash cycle

Wash cycles, 8

Table of wash cycles

Personalisation, 9

Setting the temperature Setting the drying cycle **Functions**

Detergents and laundry, 10

Detergent dispenser drawer Preparing the laundry Garments requiring special care Load balancing system

Precautions and tips, 11

General safety Disposal

Care and maintenance, 12

Cutting off the water or electricity supply Cleaning the washer-dryer Cleaning the detergent dispenser drawer Caring for the door and drum of your appliance Cleaning the pump Checking the water inlet hose


Troubleshooting, 13-14

Assistance, 15-16



Description of the washer-dryer and starting a wash cycle

Control panel

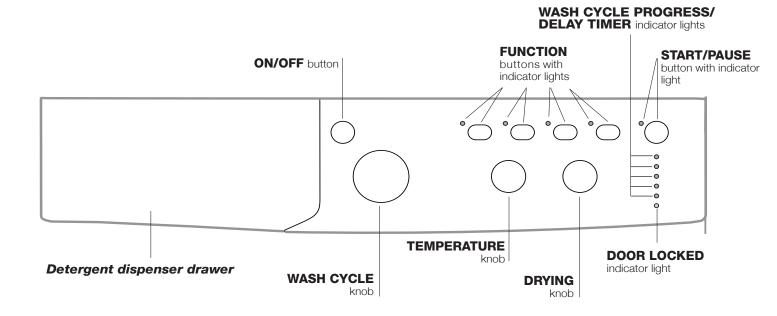

Detergent dispenser drawer: used to dispense detergents and washing additives (see "Detergents and laundry").

ON/OFF button: switches the washer-dryer on and off.

WASH CYCLE knob: programmes the wash cycles. During the wash cycle, the knob does not move.

FUNCTION buttons with indicator light: used to select the available functions. The indicator light corresponding to the selected function will remain lit.

TEMPERATURE knob: sets the temperature or the cold wash cycle (see "Personalisation").

DRYING knob: used to set the desired drying programme (see "Personalisation").

WASH CYCLE PROGRESS/DELAY TIMER indicator lights: used to monitor the progress of the wash cycle. The illuminated indicator light shows which phase is in progress.

If the Delay Timer function has been set, the time remaining until the wash cycle starts will be indicated (see next page).

DOOR LOCKED indicator light: indicates whether the door may be opened or not (see next page).

START/PAUSE button with indicator light: starts or temporarily interrupts the wash cycles.

N.B. To pause the wash cycle in progress, press this button; the corresponding indicator light will flash orange, while the indicator light for the current wash cycle phase will remain lit in a fixed manner. If the DOOR LOCKED ☐ indicator light is switched off, the door may be opened. To start the wash cycle from the point at which it was interrupted, press this button again.

Standby mode

This washing machine, in compliance with new energy saving regulations, is fitted with an automatic standby system which is enabled after about 30 minutes if no activity is detected. Press the ON-OFF button briefly and wait for the machine to start up again.



Indicator lights

The indicator lights provide important information. This is what they can tell you:

Delayed start

If the DELAY TIMER function has been activated (see "Personalisation"), after the wash cycle has been started the indicator light corresponding to the selected delay period will begin to flash:

٥ - ڔ

As time passes, the remaining delay will be displayed and the corresponding indicator light will flash:

The set programme will start once the selected time delay has expired.

Wash cycle phase indicator lights

Once the desired wash cycle has been selected and has begun, the indicator lights switch on one by one to indicate which phase of the cycle is currently in progress.

Wash	o 👸
Rinse	0 − <u>00</u>
Spin/Drain	• Ø
Drying	o -\\\.
End of wash cycle	O END

Note: when the drying cycle has finished, the DRYING knob should be returned to the "0" position.

Function buttons and corresponding indicator lights

When a function is selected, the corresponding indicator light will illuminate.

If the selected function is not compatible with the programmed wash cycle, the corresponding indicator light will flash and the function will not be activated.

If the selected function is not compatible with another function which has been selected previously, the indicator light corresponding to the first function selected will flash and only the second function will be activated; the indicator light corresponding to the enabled option will remain lit.

Door locked indicator light

When the indicator light is on, the porthole door is locked to prevent it from being opened; make sure the indicator light is off before opening the door (wait approximately 3 minutes). To open the door during a running wash cycle, press the START/PAUSE button; the door may be opened once the DOOR LOCKED indicator light turns off.

Starting a wash cycle

- **1.** Switch the washer-dryer on by pressing the ON/OFF button. All indicator lights will switch on for a few seconds, then they will switch off and the START/PAUSE indicator light will pulse.
- 2. Load the laundry and close the door.
- 3. Set the WASH CYCLE knob to the desired programme.
- 4. Set the washing temperature (see "Personalisation").
- 5. Set the drying cycle if necessary (see "Personalisation").
- 6. Measure out the detergent and washing additives (see "Detergents and laundry").
- 7. Select the desired functions.
- **8.** Start the wash cycle by pressing the START/PAUSE button and the corresponding indicator light will remain lit in a fixed manner, in green.

To cancel the set wash cycle, pause the machine by pressing the START/PAUSE button and select a new cycle.

9. At the end of the wash cycle the **END** indicator light will switch on. The door can be opened once the DOOR LOCKED indicator light turns off. Take out your laundry and leave the appliance door ajar to make sure the drum dries completely. Switch the washer-dryer off by pressing the ON/OFF button.

Wash cycles

Table of wash cycles

/cles		Max.	Max.		Detergents		Max. load (kg)		Cycle duration		
Wash cycles	Description of the wash cycle		1	Drying	Wash	Fabric softener	Nor- mal	Eco Time	Nor- mal	Eco Time	
	Daily										
1	White Cotton: extremely soiled whites.	90°	1200	•	•	•	6	-	170	-	
1	White Cotton (1): heavily soiled whites and resistant colours.	60°	1200	•	•	•	6	-	185	-	
1	White Cotton (2): heavily soiled whites and delicate colours.	40°	1200	•	•	•	6	-	180	-	
2	Cotton: heavily soiled whites and resistant colours.	60°	1200	•	•	•	6	3,5	130	105	
3	Coloured Cotton (3): lightly soiled whites and delicate colours.	40°	1200	•	•	•	6	3,5	90	75	
4	Synthetics: heavily soiled resistant colours.		800	•	•	•	2,5	2	80	65	
	Special										
5	Wool: for wool, cashmere, etc.	40°	600	-	•	•	1,5	-	55	-	
6	Silk/Curtains: for garments in silk and viscose, lingerie.	30°	0	-	•	•	1	-	55	-	
7	Jeans	40°	800	•	•	•	3	-	70	-	
	Sport										
8	Sport Intensive	30°	600	-	•	•	3	-	80	-	
9	Sport Light	30°	600	-	•	•	3		70	-	
10	Special Shoes	30°	600	-	•	•	Max. 2 pairs	-	50	-	
	Dry										
11	Cotton	-	-	•	-	-	5	-	-	-	
12	Synthetics	-	-	•	-	-	3		-	-	
13	Express Wash & Dry	30°	1200	•	•	•	0,5	-	35	-	
	Partial wash cycles										
ু ১৩	Rinse	-	1200	•	-	•	6	-	35	-	
0	Spin	-	1200	•	-	-	6	-	15	-	
***	Drain	-	0		-	-	6	-	2	-	

The length of cycle shown on the display or in this booklet is an estimation only and is calculated assuming standard working conditions. The actual duration can vary according to factors such as water temperature and pressure, the amount of detergent used, the amount and type of load inserted, load balancing and any wash options selected.

For all Test Institutes:

- 1) Test wash cycle in compliance with regulation EN 50229: set wash cycle 1 with a temperature of 60°C.
- 2) Long wash cycle for cottons: set wash cycle 1 with a temperature of 40°C.
- 3) Short wash cycle for cottons: set wash cycle 3 with a temperature of 40°C.

Specials wash cycles

Sport Intensive (wash cycle 8) is for washing heavily soiled sports clothing fabrics (tracksuits, shorts, etc.); for best results, we recommend not exceeding the maximum load indicated in the "Table of wash cycles".

Sport Light (wash cycle 9) is for washing lightly soiled sports clothing fabrics (tracksuits, shorts, etc.); for best results, we recommend not exceeding the maximum load indicated in the "Table of wash cycles". We recommend using a liquid detergent and dosage suitable for a half-load.

Sport Shoes (wash cycle **10**) is for washing sports shoes; for best results, do not wash more than 2 pairs simultaneously.

Express Wash & Dry (wash cycle **13**) was designed to wash and dry lightly soiled garments quickly. This cycle may be used to wash and dry a laundry load of up to 0.5 kg in just 35 minutes.

To achieve optimum results, use liquid detergent and pre-treat cuffs, collars and stains.

Personalisation



Setting the temperature

Turn the TEMPERATURE knob to set the wash temperature (see Table of wash cycles).

The temperature may be lowered, or even set to a cold wash \Re . The washer-dryer will automatically prevent you from selecting a temperature which is higher than the maximum value set for each wash cycle.

Setting the drying cycle

Turn the DRYING knob to select the desired drying option. There are two options:

A - Based on time: From 40 minutes to 180.

B - Based on the desired laundry dryness level: *Iron dry* : suitable for clothes which will need ironing afterwards. the remaining dampness softens creases,

making them easier to remove.

Hanger dry 2: ideal for clothes which do not need to be dried fully.

Cupboard dry : suitable for laundry which can be put back in a cupboard without being ironed.

Table of Drying times (guideline values)

Fabric type	Load type	Max. load (kg)	Cupboard dry []	Henger dry 🚣	Iron dry ⁄
Cotton	Clothing of different sizes, Terry towels	5	180	170	140
Synthe- tics	Sheets, Shirts, Py- jamas, socks, etc.	3	140	120	100

If your laundry load to be washed and dried is much greater than the maximum stated load (see adjacent table), perform the wash cycle, and when the cycle is complete, divide the garments into groups and put some of them back in the drum. At this point, follow the instructions provided for a "**Drying only**" cycle. Repeat this procedure for the remainder of the load.

Drying only

Use the cycle selector knob to select a drying cycle (11-12) in accordance with the type of fabric. The desired drying level or time may also be set using the DRYING knob.

Functions

The various wash functions available with this washer-dryer will help to achieve the desired results, every time. To activate the functions:

- 1. Press the button corresponding to the desired function;
- 2. the function is enabled when the corresponding indicator light is illuminated.

Note: If the indicator light flashes rapidly, this signals that this particular function may not be selected in conjunction with the selected wash cycle.

EcoTime

Selecting this option enables you to suitably adjust drum rotation, temperature and water to a reduced load of lightly soiled cotton and synthetic fabrics (refer to the "Table of wash cycles"). "EcoTime" enables you to wash in less time thereby saving water and electricity. We suggest using a liquid detergent suitably measured out to the load quantity.

I This function may not be used in conjunction with cycles 1, 5, 6, 7, 8, 9, 10, 11, 12, 13, 💐, 🔘, 😤.

1200-600

Press this button to reduce the spin speed.

¹ This function may not be used in conjunction with cycles 6, 11, 12, 13, ¾.

lntensive Wash

Because a greater quantity of water is used in the initial phase of the cycle, and because of the increased cycle duration, this function offers a high-performance wash.

This function may not be used in conjunction with cycles 5, 6, 7, 8, 9, 10, 11, 12, 13, $\stackrel{\circ 0}{\sim}$, \bigcirc , $\stackrel{\circ}{\sim}$.

Delay timer

This timer delays the start time of the wash cycle by up to 9 hours. Press the button repeatedly until the indicator light corresponding to the desired delay time switches on. The fifth time the button is pressed, the function will be disabled.

N.B. Once the START/PAUSE button has been pressed, the delay time can only be modified by decreasing it until launching the set programme.

! This option is enabled with all programmes.

Detergent dispenser drawer

Good washing results also depend on the correct dose of detergent: adding too much detergent will not necessarily result in a more efficient wash, and may in fact cause build up on the inside of your appliance and contribute to environmental pollution.

! Do not use hand washing detergents because these create too much foam.



Open the detergent dispenser drawer and pour in the detergent or washing additive, as follows.

Do not pour detergent into the compartment 1. Detergent should only be poured into the compartment 2.

compartment 2: Detergent for the wash cycle (powder or liquid)

Liquid detergent should only be poured in immediately prior to the start of the wash cycle.

compartment 3: Additives (fabric softeners, etc.)

The fabric softener should not overflow the grid.

Preparing the laundry

- Divide the laundry according to:
 - the type of fabric/the symbol on the label
 - the colours: separate coloured garments from whites.
- Empty all garment pockets and check the buttons.
- Do not exceed the listed values, which refer to the weight of the laundry when dry:

Durable fabrics: max. 6 kg Synthetic fabrics: max. 2,5 kg Delicate fabrics: max. 2 kg

Wool: max. 1,5 kg Silk: max. 1 kg

How much does your laundry weigh?

1 sheet 400-500 g

1 pillow case 150-200 g

1 tablecloth 400-500 g

1 bathrobe 900-1200 g

1 towel 150-250 g

Garments requiring special care

Wool: all wool garments can be washed using programme 5, even those carrying the "hand-wash only" | label. For best results, use special detergents and do not exceed 1,5 kg of laundry.

Silk: use special wash cycle **6** to wash all silk garments. We recommend the use of special detergent which has been designed to wash delicate clothes.

Curtains: fold curtains and place them in a pillow case or mesh bag. Use wash cycle **6**.

Jeans: Turn garments inside-out before washing and use a liquid detergent. Use programme **7**.

Load balancing system

Before every spin cycle, to avoid excessive vibrations and to distribute the load in a uniform manner, the drum rotates continuously at a speed which is slightly greater than the washing rotation speed. If, after several attempts, the load is not balanced correctly, the machine spins at a reduced spin speed. If the load is excessively unbalanced, the washer-dryer performs the distribution process instead of spinning. To encourage improved load distribution and balance, we recommend small and large garments are mixed in the load.

Precautions and tips



I This Washer-dryer was designed and constructed in accordance with international safety regulations. The following information is provided for safety reasons and must therefore be read carefully.

General safety

- This appliance was designed for domestic use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
 - Do not dry unwashed items in the tumble dryer.
 - Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
 - Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
 - Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
 - The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
 - WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The Washer-dryer must only be used by adults, in accordance with the instructions provided in this manual.
- Do not touch the machine when barefoot or with wet or damp hands or feet.
- Do not pull on the power supply cable when unplugging the appliance from the electricity socket. Hold the plug and pull.
- Do not open the detergent dispenser drawer while the machine is in operation.
- Do not touch the drained water as it may reach extremely high temperatures.
- Never force the porthole door. This could damage the safety lock mechanism designed to prevent accidental opening.
- If the appliance breaks down, do not under any circumstances access the internal mechanisms in an attempt to repair it yourself.
- Always keep children well away from the appliance while it is operating.

- The door can become quite hot during the wash cycle.
- If the appliance has to be moved, work in a group of two or three people and handle it with the utmost care. Never try to do this alone, because the appliance is very heavy.
- Before loading laundry into the Washer-dryer, make sure the drum is empty.
- During the drying phase, the door tends to get quite hot.
- Do not use the appliance to dry clothes that have been washed with flammable solvents (e.g. trichlorethylene).
- Do not use the appliance to dry foam rubber or similar elastomers.
- Make sure that the water tap is turned on during the drying cycles.

Disposal

- Disposing of the packaging materials: observe local regulations so that the packaging may be re-used.
- The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment, requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.


Cutting off the water and electricity supplies

- Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washerdryer and help to prevent leaks.
- Unplug the washer-dryer when cleaning it and during all maintenance work.

Cleaning the washer-dryer

The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives.

Cleaning the detergent dispenser drawer

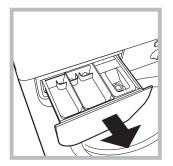

Remove the dispenser by raising it and pulling it out (see *figure*).

Wash it under running water; this operation should be repeated frequently.

Caring for the door and drum of your appliance


 Always leave the porthole door ajar in order to prevent unpleasant odours from forming.

Cleaning the pump


The washer-dryer is fitted with a self-cleaning pump which does not require any maintenance. Sometimes, small items (such as coins or buttons) may fall into the pre-chamber which protects the pump, situated in its bottom part.

! Make sure the wash cycle has finished and unplug the appliance.

To access the pre-chamber:

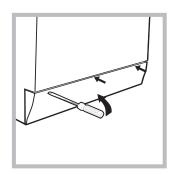

1. using a screwdriver, remove the cover panel on the lower front part of the washer-dryer (see figure);

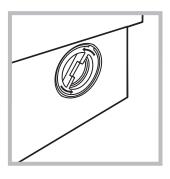

2. unscrew the lid by rotating it anti-clockwise (see figure): a little water may trickle out. This is perfectly normal;

- 3. clean the inside thoroughly;
- 4. screw the lid back on;
- 5. reposition the panel, making sure the hooks are securely in place before you push it onto the appliance.

Checking the water inlet hose

Check the inlet hose at least once a year. If there are any cracks, it should be replaced immediately: during the wash cycles, water pressure is very strong and a cracked hose could easily split open.

! Never use second-hand hoses.

Troubleshooting



Your washer-dryer could fail to work. Before contacting the Technical Assistance Centre (see "Assistance"), make sure that the problem cannot be not solved easily using the following list.

Problem:

Possible causes / Solutions:

The machine does not switch on.

- The appliance is not plugged into the socket fully, or not enough to make contact.
- There is no power to the socket, or the fuse has blown in the mains plug.

The wash cycle does not start.

- The door is not closed properly.
- The ON/OFF button has not been pressed.
- The START/PAUSE button has not been pressed.
- The water tap has not been turned on to allow water to flow into the machine.
- A delayed start has been set.

The machine does not dry.

- Check the 2 sections above.
- The 'DRYING' selector knob is in the **0** position.

The clothes are too hot when the drying cycle is finished.

 A cooling-down period is always added to the end of each drying cycle. If the clothes appear too hot to handle leave the door open to allow to cool further before removing from the machine.

The machine does not fill with water or the indicator light for the first wash cycle stage flashes rapidly.

- The water inlet hose is kinked.
- The water inlet hose is not connected to the water supply.
- The water pressure is too low.
- The water tap has not been turned on to allow water to flow into the machine.
- There is no water supply to the house.
- The inlet valve filter is blocked.
- The START/PAUSE button has not been pressed.

The machine continuously fills with water and continually drains away or Water left in the drum or Stuck on wash.

- The top of the drain hose is too low It must be fitted at a height between 65 and 100 cm from the floor (see "Installation").
- The drain hose is connected incorrectly to the sink trap allowing water to run
 into the machine, the drain hose must be positioned higher than the bottom of
 the sink to prevent water flowing down the drain hose.
- The end of the drain hose has been pushed too far down the standpipe, the 'U' bracket should be fitted 100 mm from the end of the drain hose.

The machine does not drain or spin (error lights flashing).

- The Pump filter is blocked.
- The drain hose is kinked (see "Installation").
- New Installation The blanking cap or spigot has not been removed if connected under a sink.
- The drain hose or sink trap is blocked.

The wash programme takes too long.

Programme times will vary due to water pressure, the incoming water temperature
and if the wash load goes out of balance. This will increase the programme times
accordingly (see 'The machine wont spin properly' below) - (Most Common Cause!).

The machine vibrates a lot during the spin cycle.

- The feet have not been adjusted, enabling the machine to rock.
- New Installation Either the Transit Bolts including the plastic spacers, or the Polystyrene Packaging have not been removed when installing the machine.
- The machine is trapped between cabinets and/or walls.
- The load is in a slight out of balance condition and machine is spinning, but at a lower speed.

The machine is noisy.

• There will always be some motor, pump and drum noise during spin.

The machine wont spin properly.

Out of Balance detected when attempting to go into a spin cycle - If this
happens the machine will continue to try to repeat the distribution of the load
required before the machine will go into higher spin speeds - This will increase
the programme time accordingly. This is a safety feature to prevent damage.
Out of Balance can be caused by washing a single heavy item (eg duvet, quilt,
etc). - Try the programme again using a different load.

The machine leaks from the dispenser.

- The dispenser drawer is blocked with detergent and requires cleaning.
- The water pressure is too high and requires turning down turn down the tap on the water supply pipe slightly and try again.
- The machine is tilting forwards It must be level when in its final position.

The machine leaks (other than dispenser).

- The fill hose is loose, check both the cabinet and tap ends.
- The fill hose is tight but still leaks, if so replace the rubber washers, or the fill hose is missing the rubber washer.
- The drain hose is not fixed in properly.

The option lights and the START/ PAUSE indicator light flash while one of the wash cycle progress and DOOR LOCKED lights are lit in a fixed manner. Switch off the machine and unplug it, wait for approximately 1 minute and then switch back on again. If the problem persists contact Technical Assistance Centre.

The machine smells.

• The machine requires a service wash. Run a 90 degree wash cycle with detergent and no laundry.

The machine door cannot be opened.

• The door will not open until the door lock indicator light goes out shortly after the program has finished.

Door Seal damaged at the bottom.

• The door seal has drainage holes at the bottom - This is normal.

The water level is too low when the machine is washing.

• The water level is correct if it can be seen at the bottom of the door.

There is too much foam.

- The detergent is not suitable for machine washing (it should display the text 'for washing machines' or 'hand and machine wash' or the like).
- Too much detergent was used less detergent is required in soft water.

After completing the programme, or before starting a programme, the machine has turned itself off (no lights).

• To comply with new energy saving regulations the machine is fitted with an automatic standby system. Press 'ON/OFF' button for 3 seconds to activate the machine, it can then either be switched off or a new programme selected.

General.

 Your washing machine contains sensors that monitor progress during the wash cycle (eg: Water Levels, Temperatures, Out of Balance loads, Wash time/progress).

Normally, if your machine successfully completes the cycle, there is unlikely to be anything wrong!

Remember, you will be charged for a service call for problems caused by incorrect installation, as listed above.

Not emptying contents from pockets may cause pump or drain blockages, or may damage the machine. Do not wash items which do not have a wash label, or wash items that are not intended as machine washable.

Assistance



12 Months Parts and Labour Guarantee

Your appliance has the benefit of our manufacturer's guarantee, which covers the cost of breakdown repairs for twelve months from the date of purchase.

This gives you the reassurance that if, within that time, your appliance is proven to be defective because of either workmanship or materials, we will, at our discretion, either repair or replace the appliance at no cost to you.

This guarantee is subject to the following conditions:

- The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The appliance is used only on the electricity or gas supply printed on the rating plate.
- The appliance has been used for normal domestic purposes only.
- The appliance has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us.
- Any repair work must be undertaken by us or our appointed agent.
- Any parts removed during repair work or any appliance that is replaced become our property.
- The appliance is used in the United Kingdom or Republic of Ireland.

The guarantee does not cover:

- Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation.
- Replacement of any consumable item or accessory. These include but are not limited to: plugs, cables, batteries, light bulbs, fluorescent tubes and starters, covers and filters.
- Replacement of any removable parts made of glass or plastic.

THIS GUARANTEE WILL NOT APPLY IF THE APPLIANCE HAS BEEN USED IN COMMERCIAL OR NON-DOMESTIC PREMISES.

5 Year Parts Guarantee

Indesit also offers you a free 5 year parts guarantee. This additional guarantee is conditional on you registering your appliance with us and the parts being fitted by one of our authorised engineers. There will be a charge for our engineer's time. To activate the extra parts warranty on your appliance, simply call our registration line on **08448 24 24 24 (Republic of Ireland 01 230 0800).**

Extended Guarantees

We offer a selection of repair protection plans that enable you to fully cover yourself against the expense of repair bills for the life of your policy. To find the ideal plan for you please call our advice line on

08448 226 226 (Republic of Ireland 01 230 0233).

Free Helpdesk Service


We have a dedicated team who can provide free advice and assistance with your appliance if you experience any technical difficulties within the first 90 days of ownership. Simply call our Indesit Service Hotline on **08448 224 224 (Republic of Ireland 0818 313 413)** for telephone assistance, or, where necessary, to arrange for an engineer to call.


$\mathsf{cata}\mathcal{C}$

Instruction Manual

DW60M



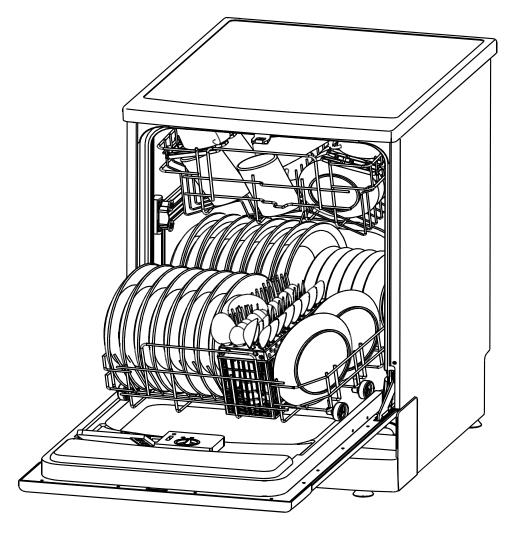

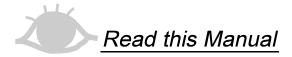

Dear Customer,

- Please carefully read this manual before using the dishwasher, it will help you to use and maintain the dishwasher properly.
- Keep it to refer to it at a later date.
- Pass it on to any subsequent owner of the appliance.

This manual contains sections on safety Instructions, Operating Instructions, Installation Instructions and Troubleshooting Tips, etc.



Before Calling for Service

- To review the section on troubleshooting Tips will help you to solve some common problems by yourself.
- If you can not solve the problems by yourself, please ask for the help of professional technicians.

NOTE:

- The manufacturer, following a policy of constant development and updating of the product, may make modifications without giving prior notice.
- This user manual shall also be got from the manufacturer or responsible vendor.

1) Safety Information1
2) Quick operation guide2
3) Operating Instructions
4) Prior using for the first time
5) Loading the Dishwasher Basket
6) Starting a washing programme
7) Maintenance and cleaning
8) Installation instruction.17Positioning the Appliance.17About Power Connection.17Water Connection.18Start of dishwasher.19
9) Troubleshooting Tips

1.IMPORTANT SAFETY INFORMATION

MARNING! When using your dishwasher, follow the precautions listed below:

- This appliance is intended to be used in household and similar applications such as:
 - -staff kitchen areas in shops, offices and other working environments;
 - -farm houses;
 - -by clients in hotels, motels and other residential type environments;
 - -bed and breakfast type environments.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. (For EN60335-1)
- This appliance is not intended for use by persons (including children)with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. (For IEC60335-1)
- This appliance is for indoor use only, for household use only.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- Please unplug before cleaning and maintenance the appliance.
- Use a soft cloth moisten with mild soap, and then use a dry cloth to wipe it again.

_____ 1-1 ____

EARTHING INSTRUCTIONS

- This appliance must be earthed. In the event of a malfunction or breakdown, earthing will reduce the risk of an electric shock by providing a path of least resistance of electric current. This appliance is equipped with a cord having an equipment-earthing conductor and a grounding plug.
- The plug must be plugged into an appropriate outlet that is installed and earthed in accordance with all local codes and ordinances.
- Improper connection of the equipment-earthing conductor can result in the risk of an electric shock.
- Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded.
- Do not modify the plug provided with the appliance; If it does not fit the outlet.
- Have a proper outlet installed by a qualified electrician.
- Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.
- Do not operate your dishwasher unless all enclosure panels are properly in place.
- Open the door very carefully if the dishwasher is operating, there is a risk of water squirting out.
- Do not place any heavy objects on or stand on the door when it is open. The appliance could tip forward.
- When loading items to be washed:
 - 1) Locate sharp items so that they are not likely to damage the door seal;

- ■2) Warning: Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.
- ■Check that the detergent powder is empty after completion of the wash cycle.
- ■Do not wash plastic items unless they are marked dishwasher safe or the equivalent.
- ■For plastic items not so marked, check the manufacturer's recommendations.
- Use only detergent and rinse additives designed for an automatic dishwasher.
- ■Never use soap, laundry detergent, or hand washing detergent in your dishwasher.
- ■Children should be supervised to ensure that they do not play with the appliance.
- The door should not be left open, since this could increase the risk of tripping.
 If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ■During installation, the power supply must not be excessively or dangerously bent or flattened.
- ■Do not tamper with controls.
- ■The appliance is to be connected to the water mains using new hose sets and that old hose-sets should not be reused.
- ■The maximum number of place settings to be washed is 12.
- ■The maximum permissible inlet water pressure is 1MPa.
- ■The minimum permissible inlet water pressure is 0.04MPa.

Disposal


- Dispose of the dishwasher packaging material correctly.
- All packaging materials can be recycled.
- Plastic parts are marked with the standard international abbreviations:
 - PE for polyethylene, e.g. sheet wrapping material
 - PS for polystyrene, e.g. padding material
 - POM—polyoxymethylene, e.g. plastic clips
 - PP polypropylene, e.g. Salt filler
 - ABS—Acrylonitrile Butadiene Styrene, e.g. Control Panel.

▲ WARNING!

- Packaging material could be dangerous for children!
- For disposing of package and the appliance please go to a recycling centre. Therefore cut off the power supply cable and make the door closing device unusable.
- Cardboard packaging is manufactured from recycled paper and should be disposed in the waste paper collection for recycling.
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- For more detailed information about recycling of this product, please contact your local city office and your household waste disposal service.
- DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.


2. Quick operation guide

For detailed operating method read the corresponding content on the instruction manual.

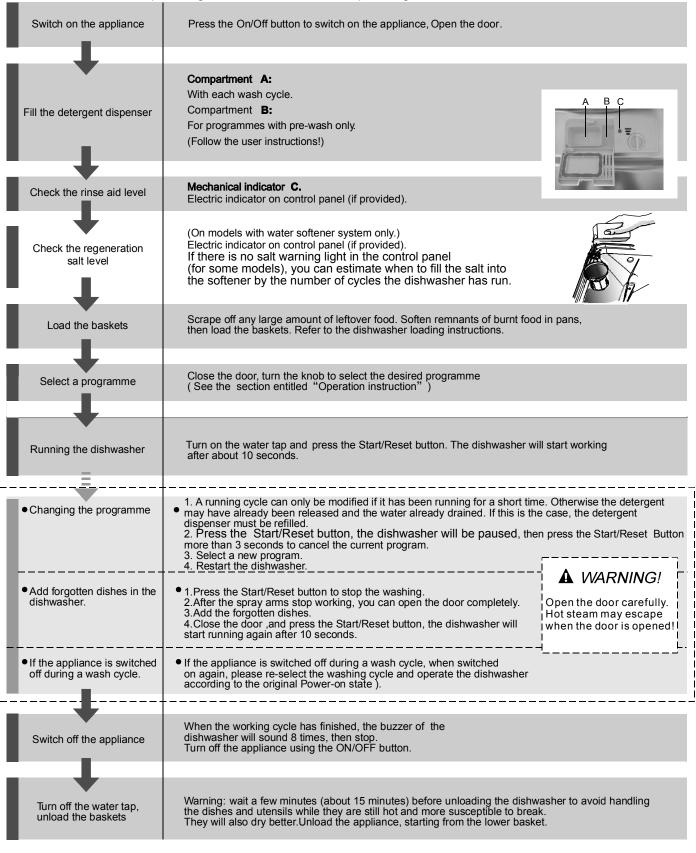

3. Operation Instruction

IMPORTANT To get the best performance from your dishwasher, read all operating instructions before using it for the first time.

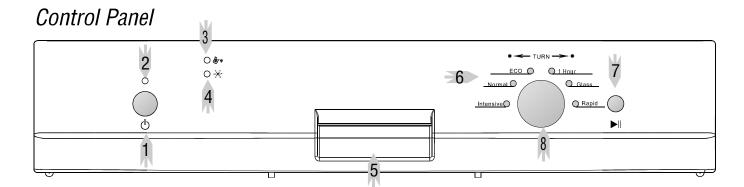


- 1 ON/OFF Button: To turn ON/OFF the power supply.
- 2 Power Light: To come on when the ON/OFF Button is pressed down.
- 3 Salt Warning Light: To come on when the softener needs to be refilled.
- 4 Rinse Aid Warning Light: To come on when the rinse aid dispenser needs to be refilled.

- 5 Door Handle: Pull it to open the door.
- 6 Program indicator light: when you select washing program, the correspond light will display.
- 7 Washing Program Selector: Turn the knob to select wash cycles.
- 8 Start / Reset Button: Press this button to start or pause the dishwasher, the one of the program lights will blink when starting.

Inlet pipe connector

Dishwasher Features

3 Lower Basket

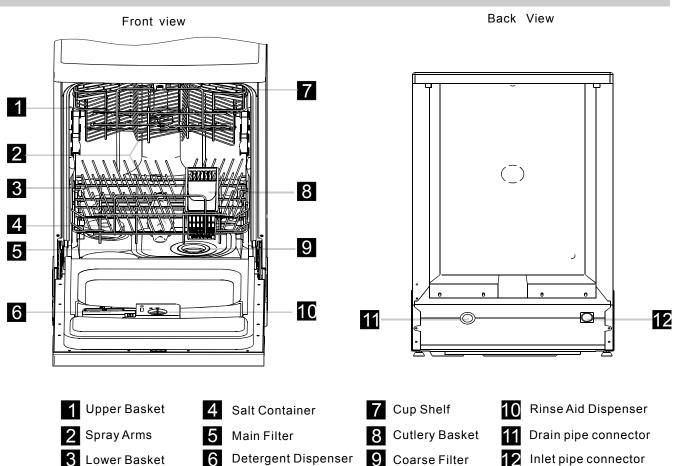

4. Prior using for the first time

Before using your dishwasher for the first time:

A. Set the water softener

B. Add 1.5Kg dishwasher salt and then full fill the salt container with water

C. Fill the rinse aid dispenser


D. Fill in detergent

A. Water Softener

The water softener must be set manually, using the water hardness dial. The water softener is designed to remove minerals and salts from the water, which would have a detrimental or adverse effect on the operation of the appliance. The higher the content of these minerals and salts, the harder your water is. The softener should be adjusted according to the hardness of the water in your area. Your local Water Authority can advise you on the hardness of the water in your area.

Adjusting Salt Consumption

The dishwasher is designed to allow for adjustment in the amount of salt consumed based on the hardness of the water used. This is intended to optimise and customise the level of salt consumption.

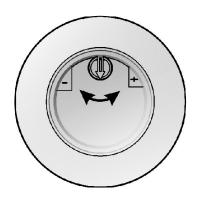

Please follow the steps below for adjustment in salt consumption.

- 1. Unscrew the cap from the salt container.
- 2. There is a ring on the container with an arrow on it (see figure on the side), if necessary, rotate the ring in the anticlockwise direction from the "-" Setting toward the "+" sign, based on the hardness of the water being used.

It is recommended that adjustments should be made in accordance with the following scheme:

	WATER	HARDNESS		0 11 11		
°dH	°fH	°Clarke	mmol/l	Selector Position	Salt consumption (gram/cycle)	Auto nomy (cycles/1kgs)
0~8	0~14	0~10	0~1.4	1	0	1
8~22	14~39	10~28	1.4~3.9	-	20	50
22~45	39~80	28~56	3.9~8	Mid	40	25
45~60	80~107	56~75	8~11	+	60	16

Note:1

1°dH=1.25°Clarke=1.78°fH=0.178mmol/l

°DH: German degree

°fH: French degree

°Clark: British degree

Note:2

"/"	No salt need added
"-"	Setting toward the"-" sign
"+"	Setting toward the"+" sign
"Mid"	Setting toward between the "-" sign

Contact your local water board for information on the hardness of your water supply.



NOTE: If your model does not have any water softener, you may skip this section.

WATER SOFTENER

The hardness of the water varies from place to place. If hard water is used in the dishwasher, deposits will form on the dishes and utensils.

The appliance is equipped with a special softener that uses a salt container specifically designed to eliminate lime and minerals from the water.


B. Loading the Salt Into the Softener

Always use the salt intended for use with dishwasher.

The salt container is located beneath the lower basket and should be filled as explained in the following:

Attention!

- Only use salt specifically designed for the use in dishwashers! Every other type of salt not specifically designed for the use in a dishwasher, especially table salt, will damage the water softener. In case of damages caused by the use of unsuitable salt the manufacturer does not give any warranty nor is liable for any damages caused.
- Only fill with salt just before starting one of the complete washing programs. This will prevent any grains of salt or salty water, which may have been spilled, remaining on the bottom of the machine for any period of time, which may cause corrosion.

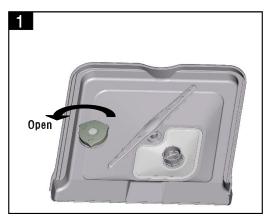



Remove the lower basket and then unscrew and remove the cap from the salt container. Place the end of the funnel(supplied) into the hole and introduce about 1.5kg of dishwasher salt. It is normal for a small amount of water to come out of the salt container. After filling the container, screw the cap tightly back clockwise.

Usually, the salt warning light will stop being illuminated within 2-6 days after the salt container has been filled with salt.

Immediately after filling the salt into the salt container, a washing program should be started (We suggest to use the soak or rapid program). Otherwise the filter system, pump or other important parts of the machine may be damaged by salty water. This is out of warranty.



- The salt container must only be refilled when the salt warning light in the control panel comes on. Depending on how well the salt dissolves, the salt warning light may still be on even though the salt container is filled.
 - If there is no salt warning light in the control panel (for some Models), you can estimate when to fill the salt into the softener by the cycles that the dishwasher has run.
- 2. If there are spills of the salt, a soak or a rapid program should be run to remove the excessive salt.

C. Fill the Rinse Aid Dispenser

Rinse Aid Dispenser

The rinse aid is released during the final rinse to prevent water from forming droplets on your dishes, which can leave spots and streaks. It also improves drying by allowing water to roll off the dishes. Your dishwasher is designed to use liquid rinse aids. The rinse aid dispenser is located inside the door next to the detergent dispenser. To fill the dispenser, open the cap and pour the rinse aid into the dispenser until the level indicator turns completely black. The volume of the rinse aid container is about 110ml.

Function of Rinse Aid

Rinse aid is automatically added during the last rinse, ensuring thorough rinsing, and spot and streak free drying.

Attention!


Only use branded rinse aid for dishwasher. Never fill the rinse aid dispenser with any other substances (e.g. Dishwasher cleaning agent, liquid detergent). This would damage the appliance.

When to Refill the Rinse Aid Dispenser

If there is no rinse-aid warning light in the control panel, you can estimate the amount from the colour of the optical level indicator "C "located next to the cap. When the rinse-aid container is full, the whole indicator will be dark. As the rinse-aid diminishes, the size of the dark dot decreases. You should never let the rinse aid level fall 1 / 4 full.

As the rinse aid diminishes, the size of the black dot on the rinse aid level indicator changes, as illustrated below.


- Full
- 3 / 4 full
- 1 / 2 full
- ① 1/4 full Should refill to eliminate spotting

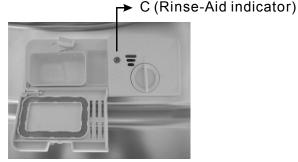






NOTE: Clean up any rinse aid spilled while during filling with an absorbent cloth to avoid excessive foaming

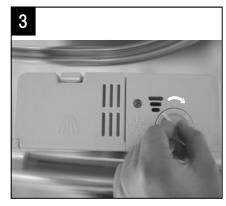

- 1 To open the dispenser, turn the cap to the "open" (left) arrow and lift it out.
- Pour the rinse aid into the dispenser, being careful not to overfill.
- Replace the cap by inserting it aligned with "open" arrow and turning it to the closed (right) arrow.

during the next wash. Don't forget to replace the cap before you close dishwasher door. Adjusting Rinse Aid Dispenser

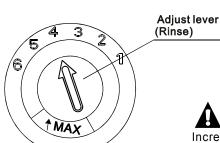

The rinse aid dispenser has six or four settings. Always start with the dispenser set on "4". If spots and poor drying are a problem, increase the amount of rinse aid dispensed by removing the dispenser lid and rotating the dial to "5". If the dishes still are not drying properly or are show spots, adjust the dial to the next higher lever until your dishes are spot-free. The recommended setting is "4". (Factory value is "4".)

NOTE:

Increase the dose if there are drops of water or lime spots on the dishes after washing. Reduce it if there are sticky whitish stains on your dishes or a bluish film on glassware or knife blades.

D. Function of Detergent

Detergents with its chemical ingredients are necessary to remove dirt, crush dirt and transport it out of the dishwasher. Most of the commercial quality detergents are suitable for this purpose.

Detergents

There are 3 sorts of detergents

- 1. With phosphate and with chlorine
- 2. With phosphate and without chlorine
- 3. Without phosphate and without chlorine

Normally new pulverised detergent is without phosphate. Thus the water softener function of phosphate is not given. In this case we recommend to fill salt in the salt container even when the hardness of water is only 6 °dH. If detergents without phosphate are used in the case of hard water often white spots appear on dishes and glasses. In this case please add more detergent to reach better results. Detergents without chlorine do only bleach a little. Strong and coloured spots will not be removed completely. In this case please choose a program with a higher temperature.

Concentrated Detergent

Based on their chemical composition, detergents can be split in two basic types:

- conventional, alkaline detergents with caustic components
- low alkaline concentrated detergents with natural enzymes


Detergent Tablets


Detergent tablets of different brands dissolve at different speeds. For this reason some detergent tablets cannot dissolve and develop their full cleaning power during short programs. Therefore please use long programs when using detergent tablets, to ensure the complete removal of detergent residuals.

Detergent Dispenser

The dispenser must be refilled before the start of each wash cycle following the instructions provided in the wash cycle table . Your dishwasher uses less detergent and rinse aid than Conventional dishwasher. Generally, only one tablespoon of detergent is needed for a normal wash load. More heavily soiled items need more detergent. Always add the detergent just before starting the dishwasher, otherwise it could get damp and will not dissolve properly.

Amount of Detergent to Use

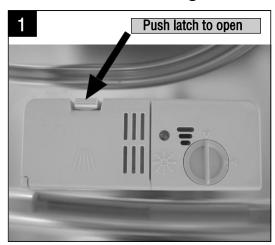

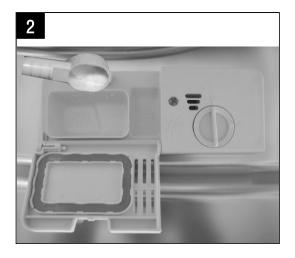

NOTE:

- If the lid is closed: press release button. The lid will spring open.
- Always add the detergent just before starting each wash cycle.
- Only use branded detergent aid for dishwasher.

▲WARNING!

Dishwasher detergent is corrosive! Take care to keep it out of reach of children.

Proper Use of Detergent

Use only detergent specifically made for the use in dishwashers. Keep your detergent fresh and dry. Don't put powdered detergent into the dispenser until you're ready to wash dishes.

Fill in Detergent

Fill the detergent dispenser with detergent. The marking indicates the dosing levels, as illustrated on the right:


A The place of main wash cycle detergent placed.

B The place of pre-wash cycle detergent placed.

Please observe the manufacturers dosing and storage Recommendations as stated on the detergent packaging.

Close the lid and press until it locks in place.

If the dishes are heavily soiled, place an additional detergent dose in the pre-wash detergent chamber. This detergent will take effect during the pre-wash phase.

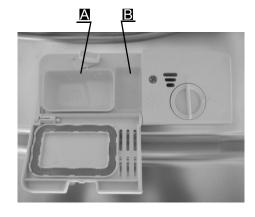

A

NOTE:

- You find information about the amount of detergent for the single programme on the last page.
- Please aware, that according to the level soiling and the specific hardness of water differences are possible.
- Please observe the manufacturer's recommendations on the detergent packaging.

5.Loading the Dishwasher Baskets

Recommendation

- Consider buying utensils which are identified as dishwasher-proof.
- Use a mild detergent that is described as 'kind to dishes'. If necessary, seek further information from the detergent manufacturers.
- For particular items, select a program with as low a temperature as possible.
- To prevent damage, do not take glass and cutlery out of the dishwasher immediately after the programme has ended.

For washing in the dishwasher the following cutlery/dishes

Are not suitable

- Cutlery with wooden, horn china or mother-of-pearl handles
- Plastic items that are not heat resistant
- Older cutlery with glued parts that are not temperature resistant
- Bonded cutlery items or dishes
- Pewter or cooper items
- Crystal glass
- Steel items subject to rusting
- Wooden platters
- Items made from synthetic fibres

Are of limited suitability

- Some types of glasses can become dull after a large number of washes
- Silver and aluminum parts have a tendency to discolour during washing
- Glazed patterns may fade if machine washed frequently

Attention before or after loading the Dishwasher Baskets

(For best performance of the dishwasher, follow these loading guidelines. Features and appearance of baskets and cutlery baskets may vary from your model.)

Scrape off any large amounts of leftover food. Soften remnants of burnt food in pans.

It is not necessary to rinse the dishes under running water.

Place objects in the dishwasher in following way:

- 1.Items such as cups, glasses, pots/pans, etc. are faced downwards.
- 2. Curved items, or ones with recesses, should be loaded aslant so that water can run off.
- 3.All utensils are stacked securely and can not tip over.
- 4.All utensils are placed in the way that the spray arms can rotate freely during washing.



NOTE: Very small items should not be washed in the dishwasher as they could easily fall out of the basket.

- Load hollow items such as cups, glasses, pans etc. With the opening facing downwards so that water cannot collect in the container or a deep base.
- Dishes and items of cutlery must not lie inside one another, or cover each other.
- To avoid damage to glasses, they must not touch.
- Load large items which are most difficult to clean into the lower basket.
- The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups
- Long bladed knives stored in an upright position are a potential hazard!
- Long and/or sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket.
- Please do not overload your dishwasher. This is important for good results and for reasonable consumption of energy.

Removing the Dishes


To prevent water dripping from the upper basket into the lower basket, we recommend that you empty the lower basket first and then the upper basket.

The Method Loading Normal Dishware

Loading the Upper Basket

The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups and saucers, as well as plates, small bowls and shallow pans (as long as they are not too dirty).

Position the dishes and cookware so that they will not get moved by the spray of water.

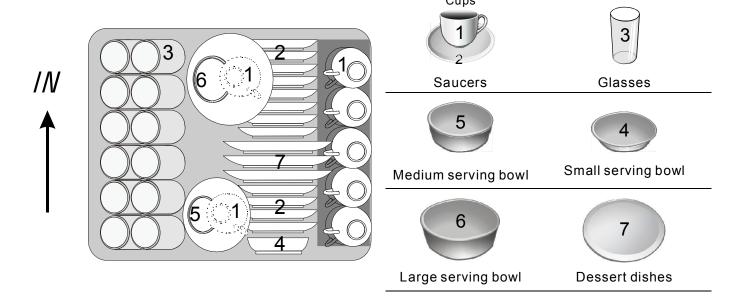


Loading the Lower Basket

We suggest that you place large items and the most difficult to clean items are to be placed into the lower basket: such as pots, pans, lids, serving dishes and bowls, as shown in the figure below.


It is preferable to place serving dishes and lids on the side of the racks in order to avoid blocking the rotation of the top spray arm.

Please be reminded that:


- Pots, serving bowls, etc, must always be placed top down.
- Deep pots should be slanted to allow water to flow out.
- The Bottom Basket features folding spikes so that larger or more pots and pans can be loaded.

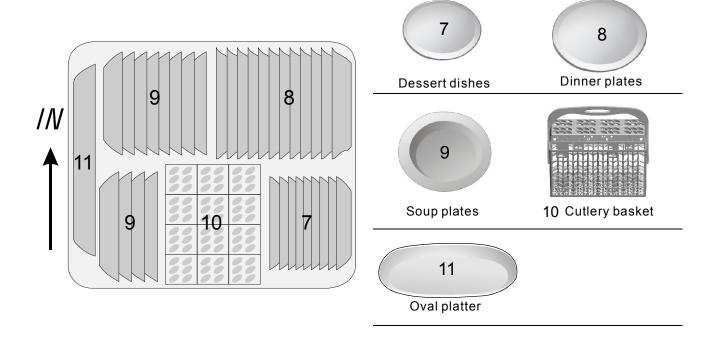


The recommended method loading big dishware (applicable to the special dishware: e.g. big pan, plate)

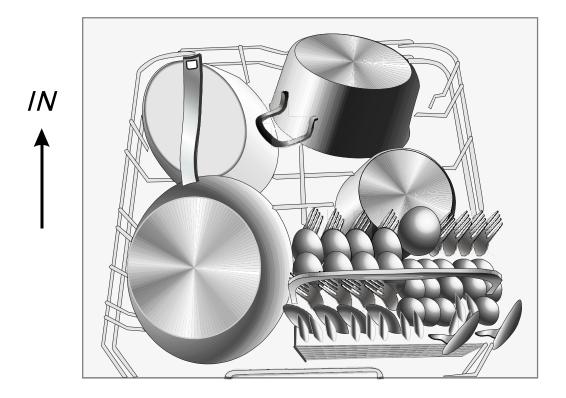

Adjusting the Upper Basket
The height of the upper basket can be adjusted in order to create more space for large utensils both for the upper/lower basket. The height of the upper basket can be adjusted by placing the wheels on different height of the rails. Long items, serving cutlery, salad servers and knives should be placed on the shelf so that they do not obstruct the rotation of the spray arms. The shelf can be folded back or be removed when not required for use.

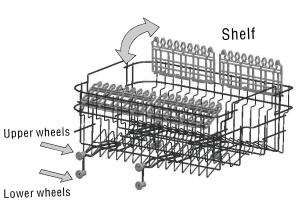

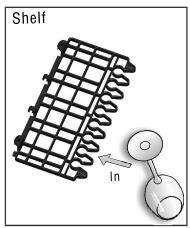







Folding Spikes of Lower Basket

For better stacking of pots and pans, the spikes can be folded down as show in the picture right.

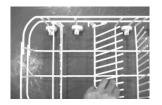

Cutlery Basket

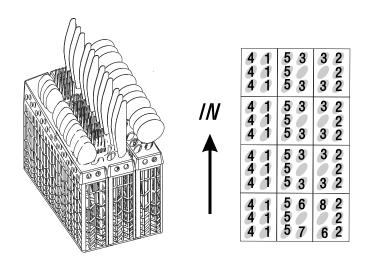

1 Forks Soup spoons Dessert spoons Teaspoons Knives Serving spoons Gravy ladles Serving forks



$oldsymbol{\Lambda}$ WARNING!

Do not let any item extend through the bottom. Always load sharp utensils with the sharp point down!

For personal safety and a top quality cleaning, place the silverware in the basket making sure that:

- They do not nest together.
- Silverware is placed with the handles-down.
- But place knives and other potentially dangerous utensils are placed handles-up.

6.Starting a washing program

Wash Cycle Table



NOTE: (**) Means: need to fill rinse into the Rinse-Aid Dispenser.

Program	Cycle Selection Information	Description of Cycle	Detergent pre/main	Running time(min)	Energy (Kwh)	Water (L)	Rinse Aid
Intensive	For heaviest soiled crockery, and normally soiled pots, pans, dishes etc with dried on soiling;	Pre-wash(50°C) Wash (65°C) Rinse Rinse (55°C) Drying	5/25g	125	1.36	19.5	*
Normal	For normally soiled loads, such as pots plates glasses and lightly soiled pans.	Pre-wash(50 °C) Wash (55 °C) Rinse Rinse(65 °C) Drying	5/25g	160	1.30	16.0	*
ECO (*EN 50242)	This is standard programme, it is suitable to clean normally soiled tableware and it is the most efficient programme in terms of its combined energy and water consumption for that type of tableware.	pre-wash Wash (50 ℃) Rinse (65 ℃) Drying	5/25g	165	1.02	12.0	*
1 Hour	For lightly soiled loads that do not need excellent drying efficiency.	Wash(60°C) Rinse Rinse (50°C) Drying	30g	60	0.95	12.0	*
Glass	For lightly soiled crockery and glass	Wash (40℃) Rinse Rinse (60℃) Drying	20 g.	95	0.90	16.0	*
Rapid	A shorter wash for lightly soiled loads and quick wash	Wash (40 °C) Rinse Rinse (40 °C)	20 g.	30	0.50	11.0	

A NOTE:

*EN 50242 : This programme is the test cycle. The information for comparability test in accordance with EN 50242, as follows:

- Capacity: 12 setting
- Position Upper basket: upper wheels on rails
- Rinse aid setting: 6
- The power consumption of off-mode is 0W left-on mode is 0.4W

Turning On the Appliance

Starting a cycle wash

- Draw out the lower and upper basket, load the dishes and push them back. It is commended to load the lower basket first, then the upper one (see the section entitled "Loading the Dishwasher").
- Pour in the detergent (see the section entitled "Salt, Detergent and Rinse Aid").
- Insert the plug into the socket. The power supply is 220-240 VAC /50 HZ, the specification of the socket is 10A 250VAC. Make sure that the water supply is turned on to full pressure.
- Close the door, press the ON/OFF button, and the ON/OFF light will turn on. Turn the knob to select a desired wash cycle, press the Start/Reset button, the machine will work after 10 seconds.

Change the Program...

Premise

- A cycle that is underway can only be modified if it has only been running for a short time. Otherwise, the detergent may have already been released, and the appliance may have already drained the wash water. If this is the case, the detergent dispenser must be refilled (see the section entitled "Loading the Detergent").
- Press the Start/Reset button, the dishwasher will be paused, then press the Start/Reset button more than 3 seconds to cancel the current program, you can change the program to the desired cycle setting (see the section entitled "Starting a wash cycle...").
- **3** The indicator light shows the state of the dishwasher:
 - a)One of the program lights on-----> stand by or pause;
 - b)One of the program lights blinking slowly -----> run;
 - c)Some of the the program lights fast blinking----> error.



If you open the door during a wash cycle, the machine will pause. the buzzer will mooing every minute unless you close the door. After you close the door, the machine will keep on working after 10 seconds.

Forgot to Add a Dish?

A forgotten dish can be added any time before the detergent cup opens.

Press the Start/Reset button

- 4 Close the door
- After the spray arms stop working, you can open the door completely.
- Press the Start/Reset button, the dishwasher will run after 10 seconds.

3 Add forgotten dishes.

At the End of the Wash Cycle

When the working cycle has finished, the buzzer of the dishwasher will sound for 8 seconds, then stop. Turn off the appliance using the ON/OFF button, shut off the water supply and open the door of the dishwasher. Wait for a few minutes before unloading the dishwasher to avoid handling the dishes and utensils while they are still hot and more susceptible to breakage. They will also dry better.

■ Switch Off the Dishwasher

- 1.Switch off the dishwasher by pressing the ON/OFF button.
- 2. Turn off the water tap!

Open the door carefully.

Hot dishes are sensitive to knocks. The dishes should therefore be allowed to cool down around 15 minutes before removing from the appliance.

Open the dishwasher's door, leave it ajar and wait a few minutes before removing the dishes. In this way they will be cooler and the drying will be improved.

Unloading the dishwasher

It is normal that the dishwasher is wet inside.

Empty the lower basket first and then the upper one. This will avoid water dripping from the upper Basket onto the dishes in the lower one.


▲WARNING!

It is dangerous to open the door when washing, because the hot water may scald you.

7. Maintenance and Cleaning

Filtering System

The filter prevents larger remnants of food or other objects from getting inside the pum. The residues may block the filter, in this case they must be removed.

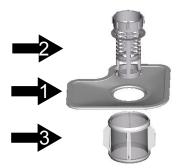

The filter system consists of a coarse filter, a flat (Main filter) And a microfilter (Fine filter).

Main filter

Food and soil particles trapped in this filter are pulverized by a special jet on the lower spray arm and washed down to drain.

Coarse filter 2

Larger items, such as pieces of bones or glass, that could block the drain are trapped in the coarse filter. To remove the items caught by the filter, gently squeeze the tap on the top of this filter and lift out.

Fine filter 3

This filter holds soil and food residues in the sump area and prevents it from being redeposit on the dishes during wash cycle.

Filter assembly

The filter efficiently removes food particles from the wash water, allowing it to be recycled during the cycle. For best performance and results, the filter must be cleaned regularly. For this reason, it is a good idea to remove the larger food particles trapped in the filter after each wash cycle by rinsing the semicircular filter and cup under running water. To remove the filter device, pull the cup handle in the upward direction.

▲ WARNING!

2

- The dishwasher must never be used without the filters.
- Improper replacement of the filter may reduce the performance level of the appliance and damage dishes and utensils.



Step 1: Turn the filter in anti-clockwise direction, then lift it up.



Step 2: lift the Main filter up



Step 3: lift the Fine filter up

NOTE: When following this procedure from step1 to step 3, the filter system will be removed; when following it from Step 3 to Step 1, the filter system will be installed.

Remarks:

- Inspect the filters for blocking after every time the dishwasher has been used.
- By unscrewing the coarse filter, you can remove the filter system. Remove any food remnants and clean the filters under running water.



NOTE: The entire filter assembly should be cleaned once a week.

Cleaning the Filter

To clean the coarse filter and the fine filter, use a cleaning brush. Reassemble the filter parts as shown in the figures on the last page and reinsert the entire assembly in the dishwasher, positioning it in its seat and pressing downwards.

▲ WARNING!

When cleaning the filters, don't knock on them. Otherwise, the filters could be contorted and the performance of the dishwasher could be decreased.

Caring for the Dishwasher


The control panel can be cleaned by using a lightly dampened cloth.

After cleaning, make sure to dry it thoroughly.

For the exterior, use a good appliance polish wax.

Never use sharp objects, scouring pads or harsh cleaners on any part of the dishwasher.

Cleaning The Door

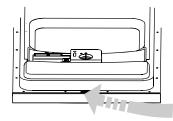

To clean the edge around the door, you should use only a soft warm, damp cloth. To avoid penetration of water into the door lock and electrical components, do not use a spray cleaner of any kind.

▲ WARNING!

- Never use a spray cleaner to clean the door panel as it may damage the door lock and electrical components.
- Abrasive agents or some paper towels should not be used because of the risk of scratching or leaving spots on the stainless steel surface.

Protect Against Freezing

please take frost protection measures on the dishwasher in winter. Every time after washing cycles, please operate as follows:

- 1.Cut off the electrical power to the dishwasher.
- 2. Turn off the water supply and disconnect the water inlet pipe from the water valve.
- 3. Drain the water from the inlet pipe and water valve. (Use a pan to catch the water)
- 4. Reconnect the water inlet pipe to the water valve.
- 5.Remove the filter at the bottom of the tub and use a sponge to soak up water in the sump.



NOTE: If your dishwasher cannot work because of the ice, please contact professional service persons.


Cleaning the Spray Arms

It is necessary to clean the spray arms regularly for hard water chemicals will clog the spray arm jets and bearings.

To remove the upper spray arm, screw off the nut clockwise then remove the arm.

To remove the lower spray arm, pull out the spray arm upward.

Wash the arms in soapy and warm water and use a soft brush to clean the jets. Replace them after rinsing them thoroughly.

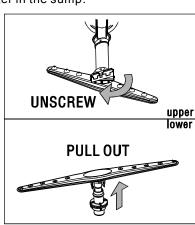

How to Keep Your Dishwasher in Shape

■ After Every Wash

After every wash, turn off the water supply to the appliance and leave the door slightly open so that moisture and odours are not trapped inside.

Remove the Plug

Before cleaning or performing maintenance, always remove the plug from the socket.

■ No Solvents or Abrasive Cleaning

To clean the exterior and rubber parts of the dishwasher, do not use solvents or abrasive cleaning products. Only use a cloth with warm soapy water. To remove spots or stains from the surface of the interior, use a cloth dampened with water an a little vinegar, or a cleaning product made specifically for dishwashers.

■ When not in Use for a LongTime

It is recommend that you run a wash cycle with the dishwasher empty and then remove the plug from the socket, turn off the water supply and leave the door of the appliance slightly open. This will help the door seals to last longer and prevent odours from forming within the appliance.

■ Moving the Appliance

If the appliance must be moved, try to keep it in the vertical position. If absolutely necessary, it can be positioned on its back.

Seals


One of the factors that cause odours to form in the dishwasher is food that remains trapped in the seals. Periodic cleaning with a damp sponge will prevent this from occurring.

8.Installation instruction

Positioning the Appliance

Position the appliance in the desired location. The back should rest against the wall behind it, and the sides, along the adjacent cabinets or walls. The dishwasher is equipped with water supply and drain hoses that can be positioned either to the right or the left sides to facilitate proper installation.

Levelling the Appliance

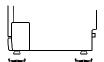

Once the appliance is positioned for levelling, the height of the dishwasher may be altered via adjustment of the screwing level of the feet. In any case, the appliance should not be inclined more than 2_{\circ} .

About Power Connection

♠ WARNING!

For personal safety:

- Do not use an extension cord or an adapter plug with this appliance.
- Do not, under any circumstances, cut or remove the earthing
- Connection from the power cord.

Electrical Requirements

Please look at the rating label to know the rating voltage and connect the dishwasher to the appropriate power supply. Use the required fuse 10 amp, time delay fuse or circuit breaker recommended and provide separate circuit serving only this appliance.

Electrical Connection

A Insure proper ground exists before use

Ensure the voltage and frequency of the power being corresponds to those on the rating plate. Only insert the plug into an electrical socket which is earthed properly. If the electrical socket to which the appliance must be connected is not appropriate for the plug, replace the socket, rather than using a adaptors or the like as they could cause overheating and burns.

Water Connection

Cold Water Connection



Connect the cold water supply hose to a threaded 3/4(inch) connector and make sure that it is fastened tightly in place.

If the water pipes are new or have not been used for an extended period of time, let the water run to make sure that the water is clear. This precaution is needed to avoid the risk of the water inlet to be blocked and damage the appliance.


▲ WARNING!

Please close the hydrant after using.

Drain hose Connection

Insert the drain hose into a drain pipe with a minimum diameter of 4cm, or let it run into the sink, making sure to avoid bending or crimping it. Use the special plastic support that comes with the appliance . The top of the hose must be at a height between 40 and 100cm. The free end of the hose must not be immersed in water to avoid the back flow of it.

A PLEASE HANG UP THE DRAIN HOSE EITHER WAY OF A, B, C

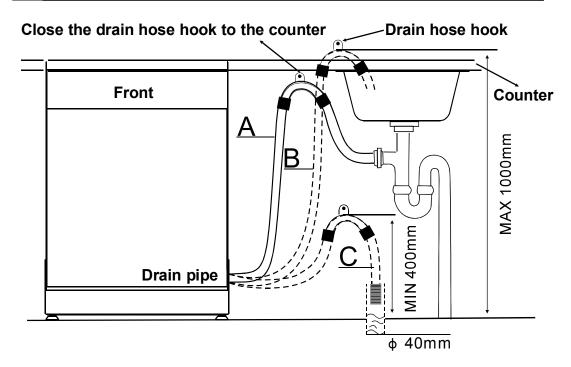

How to Drain Excess Water From Hoses

If the sink is 1000 higher from the floor, the excess water in hoses cannot be drained directly into the sink. It will be necessary to drain excess water from hoses into a bowl or suitable container that is held outside and lower than the sink.

Water Outlet

Connect the water drain hose. The drain hose must be correctly fitted to avoid water leaks. Ensure that the water drain hose is not kinked or squashed.

Extension Hose

If you need a drain hose extension, make sure to use a similar drain hose. It must be no longer than 4 metres; otherwise the cleaning effect of the dishwasher could be reduced.

Syphon Connection

The waste connection must be at a height of between 40 cm (minimum) and 100 cm (maximum) from the bottom of the dish. The water drain hose should be fixed by a hose clip. The free end of the hose must not be immersed in water.

Start of Dishwasher

The following things should be checked before starting the dishwasher.

- 1 The dishwasher is level and fixed properly
- 2 The inlet valve is open
- 3 There is a leakage at the connections of the conducts
- 4 The wires are tightly connected
- **5** The power is switched on
- 6 The inlet and drain hoses are knotted
- All packing materials and printings should be taken out from the dishwasher

 $\frac{A}{A}$

Attention: After installation, please make sure to keep this manual.

The content of this manual is very helpful to the users.

Before Calling for Service

Review the charts on the following pages may save you from calling for service.

	Problem	Possible Causes	What To Do
2	Dishwasher doesn't start	Fuse blown, or the circuit breaker acted	Replace fuse or reset circuit breaker. Remove any other appliances sharing the same circuit with the dishwasher
		Power supply is not turned on	Make sure the dishwasher is turned on and the door is closed securely.
			Make sure the power cord is properly plugged into the wall socket.
		Water pressure is low	Check that the water supply is connected properly and the water is turned on.
Technical problems		Door of dishwasher not properly closed.	Make sure to close the door properly and latch it.
	water not pumped form dishwasher	Kink in drain hose	Check drain hose.
	TOTTI GISTIWASTIEL	Filter clogged	Check coarse the filter (see section titled " Cleaning The Filter ")
		Kitchen sink clogged	Check the kitchen sink to make sure it is draining well. If the problem is the kitchen sink not draining ,you may need a plumber rather than a serviceman for dishwashers
	Suds in the tub	Improper detergent	Use only the special dishwasher detergent to avoid suds. If this occurs, open the dishwasher and let suds evaporate. Add 1 gallon of cold water to the tub. Close and latch the dishwasher, then Start any wash cycle to drain out the water . Repeat if necessary.
		Spilled rinse-aid	Always wipe up rinse-aid spills immediately.
	Stained tub interior	Detergent with colourant was used	Make sure that the detergent is the one without colourant.
General problems	White film on inside surface	Hard water minerals	To clean the interior, use a damp sponge with dishwasher detergent and wear rubber gloves. Never use any other cleaner than dishwasher detergent for the risk of foaming or suds.
	There are rust stains on cutlery	The affected items are not corrosion resistant.	
		A programme was not run after dishwasher salt was added. Traces of salt have gotten into the wash cycle	Always run the quick wash programme . without any crockery in the dishwasher and without selecting the Turbo function (if present), after adding dishwasher salt.
		The lid of the softer is loose	Check the lip .Ensure the fix is fine.
	Knocking noise in the wash cabinet	A spray arm is knocking against an item in a basket	Interrupt the programme, and rearrange the items which are obstructing the spray arm.
Noise	Rattling noise in the wash cabinet	Items of crockery are loose in the wash cabinet	Interrupt the programme, and rearrange the items of crockery.
	Knocking noise in the water pipes	This may be caused by on-site installation or the cross-section of the piping.	This has no influence on the dishwasher function. if in doubt, contact a suitably qualified plumber.

	Problem	Possible Causes	What To Do
4	The dishes are not clean	The dishes were not loaded correctly.	See notes in " Loading the Dishwasher Baskets ".
		The programme was not powerful enough.	Select a more intensive programme. See" Wash Cycle Table ".
		Not enough detergent was dispensed.	Use more detergent, or change your detergent.
		Items are blocking the path of spray arms.	Rearrange the items so that the spray can rotate freely
Unsatis -factory washing result		The filter combination in the base of wash cabinet is not clean or is not correctly fitted. This may cause the spray arm jets to get blocked.	Clean and/or fit the filter combination correctly. Clean the spray arm jets. See "Cleaning the Spray Arms".
	Cloudiness on glassware	Combination of soft water and too much detergent.	Use less detergent if you have soft water and select a shortest cycle to wash the glassware and to get them clean.
	Black or gray marks on dishes	Aluminum utensils have rubbed against dishes.	Use a mild abrasive cleaner to eliminate those marks.
	Detergent left in dispenser cups	Dishes block detergent cups.	Re-loading the dishes properly.
	The dishes are not drying	Improper loading	Load the dishwasher as suggested in the directions.
	, 0	Too little rinse-aid	Increase the amount of rinse-aid/refill the rinse-aid dispenser.
Unsatis -factory drying result		Dishes are removed too soon	Empty the lower basket first and then the upper one. This will avoid water dripping from the upper Basket onto the dishes in the lower one.
		Wrong program has been selected	In short program the washing temperature is lower. This also lowers cleaning performance. Choose a program with a long washing time.
		Use of cutlery with a low-quality coating	Water drainage is more difficult with these items. Cutlery or dishes of this type are not suitable for washing in the dishwasher.


Error Codes

When some malfunctions come on, the appliance will display error codes to warn you:

Codes	Meanings	Possible Causes	
The ECO light flicker fleetly	Longer inlet time.	Tap is not opened, or water intake is restricted,or water pressure is too low.	
The Intensive light flicker fleetly	Overflow.	Some element of dishwasher leaks .	

▲ WARNING!

- If overflow occurs, turn off the main water supply before calling a service.
- If there is water in the base pan because of an overfill or small leak, the water should be removed before restarting the dishwasher.

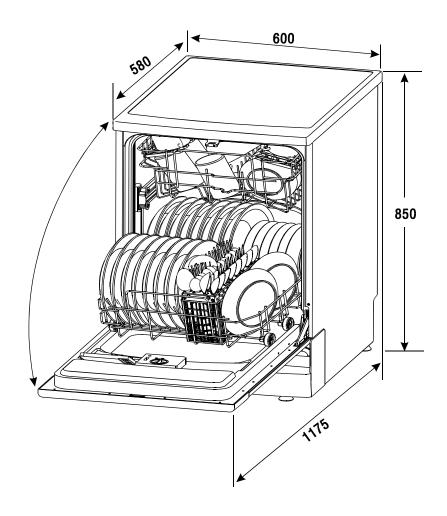

Height:	850mm
Width:	600 mm
Depth:	580mm
Water pressure:	0.04-1.0MPa
Power supply:	see rating label
Capacity:	12 place settings

Technical Data Sheet

Sheet of household dishwasher according to EU Directive 1059/2010:

Manufacturer	CATA
Type / Description	DW60M
Standard place settings	12
Energy efficiency class	A+
Annual energy consumption 2	290kWh
Energy consumption of the standard cleaning cycle	1.02 kWh
Power consumption of off-mode	0 W
Power consumption of left-on mode	0.4 W
Annual water consumption 3	3360 liter
Drying efficiency class 4	A
Standard cleaning cycle 5	ECO 50°C
Program duration of the standard cleaning cycle	165 min
Noise level	54 dB(A) re 1 pW
Mounting	build under
Could be built-in	Yes
Height	85 cm
Width	60 cm
Depth (with connectors)	58 cm
Power consumption	1760-2100 W
Rated voltage / frequency	220-240 V~ / 50 Hz
Water pressure (flow pressure)	0.4-10 bar = 0.04-1 MPa

NOTE:

- 1 A + + + (highest efficiency) to D (lowest efficiency)
- 2 Energy consumption "290" kWh per year, based on 280 standard cleaning cycles using cold water fill and the consumption of the low power modes. Actual energy consumption will depend on how the appliance is used.
- 3 Water consumption "3360" litres per year, based on 280 standard cleaning cycles. Actual water consumption will depend on how the appliance is used.
- 4 A (highest efficiency) to G (lowest efficiency)
- This program is suitable for cleaning soiled normally soiled tableware and that it is the most efficient programme in terms of its combined energy and water consumption for that type of tableware.

The device meets the European standards and the directives in the current version at delivery:

- LVD 2006/95/EC
- EMC2004/108/EC
- ErP 2009/125/EC


The above values have been measured in accordance with standards under specified operating conditions. Results may vary greatly according to quantity and pollution of the dishes, water hardness, amount of detergent, etc.

The manual is based on the European Union's standards and rules.



COOKE[™] &LEWIS

MULTIFUNCTION OVEN

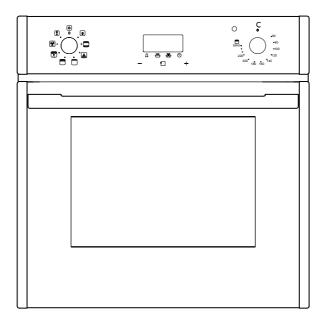









Microwave oven - Barcode: 5052931258758



WARNING: Read the instructions before using the appliance.

Let's get started...

These instructions are for your safety. Please read through them thoroughly before use and retain them for future reference.

	Getting Started	
	Your product	04
	Before you start	05
	Safety	06
	In more detail	
(4)	Operation	12
	Care and maintenance	22
	Troubleshooting	27
	Recycling and disposal	28
	Technical and legal information	28
	Guarantee	29
	CE Declaration of conformity	31



Appendix...

Installation

32




Your product




Note!

This diagram may be slightly different from the layout of the appliance.


- A. Control panel
- B. Cooking mode selection knob
- C. Cooking temperature selection knob
- D. Electronic programmer allows you to programme the desired cooking by selecting the cooking time and the end cooking time. It can also be used as a timer
- E. Oven indication light
- F. Dripping pan or baking sheet
- G. Oven rack
- H. Guides for sliding the racks or dripping in and out

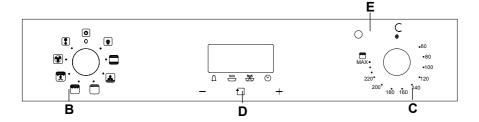

D Electronic programmer

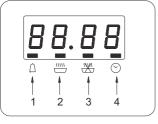

- 1. Timer
- Cooking time setting
- 3. End cooking time setting
- 4. Clock

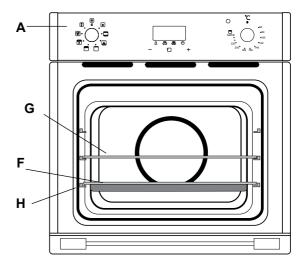

4



Things to check before you start



To avoid the risks that are always present when you use an electrical appliance it is important that this appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. Please keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check that it is not damaged. If in doubt, do not use the appliance but contact Customer Services on 0844 800 1128 (UK), 0144 75261 (Ireland).



Check the package and make sure you have all of the parts listed.



Decide on the appropriate location for your product.



If this product contains glass please take care when fitting or handling to prevent personal injury or damage to the product.



The specifications plate is available on this appliance. This plate displays all the necessary identification information for ordering replacement parts.



If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass on this manual so that the new owner can become familiar with the appliance and its safety warnings.

You will need







We advise when installing this appliance two people are recommended.

Installation guide located at the end of the guidebook






These instructions are for your safety. Please read through them thoroughly prior to installation and retain them for future reference.




- All installation work must be carried out by a competent person or qualified electrician.
- This appliance must be installed correctly by a suitably qualified person, strictly following the manufacturer's instructions.

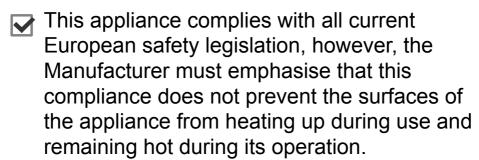

- Do not allow the electric cables to touch the hot parts of the appliance.
- Make sure that the power cord is not caught under or in the appliance and avoid damage to the power cable.
- Do not remove the plug in the presence of flammable gas.



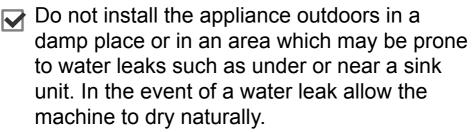

- Please dispose of the packing material carefully.
- Do not use flammable sprays in close vicinity to the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a danger or injury.
- A steam cleaner is not to be used.








- The appliance is not intended to be operated by means of external timer or separated remote-control system.
- The appliance is for domestic use only.
- The Manufacturer declines all liability for personal or material damage as a result of misuse or incorrect installation of this appliance.
- Danger of burns! During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
- Warning! Accessible parts may become hot during use. Children should be kept away.
- Warning! If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
- Do not lean on the door or place any objects on the door of the appliance. This can damage the door hinges.
- The oven should be cleaned regularly and any food deposits removed.
- Warning! Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- The oven must be installed in accordance with installation instructions and all dimensions must be followed.



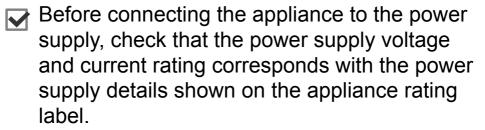


- Never use a damaged appliance! Disconnect the appliance from the electrical outlet and contact your retailer if it is damaged.
- Danger of electric shock! Do not attempt to repair the appliance yourself. In case of malfunction, repairs are to be conducted by qualified personnel only.
- To avoid damaging the cord, do not squeeze, bend or chafe it on sharp edges. Keep it away from hot surfaces and open flames as well.
- Lay out the cord in such a way that no unintentional pulling or tripping over it is possible.
- Keep the appliance and its cord out of reach of children.
- If an extension cord is used, its capacity needs to be suitable for the power consumed by the appliance.
- Do not operate the appliance with wet hands or while standing on a wet floor. Do not touch the power plug with wet hands.








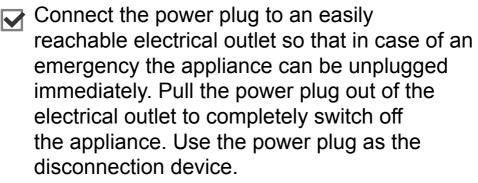

- Disconnect the power plug from the electrical outlet when not in use and before cleaning.
- Always turn the appliance off before disconnecting the power plug.
- This appliance is classified as protection class I and must be connected to a protective ground (Earth).
- Means for full disconnection must be incorporated in the fixed wiring in accordance with the wiring rules. To achieve this install an appropriate circuit breaker (CB) and residual current device (RCD). It should be installed in an easily reachable place so that in case of emergency the appliance can be disconnected from power immediately.
- The fixed wiring must be protected against heat surfaces.
- Do not hang an objects to the handle of the oven door.



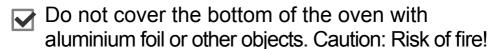

- Do not allow aluminium foil, plastic, paper or fabric contact with heating elements.
- Never leave the appliance unattended during use, especially when cooking with flammable substances (e.g. hot oil, fat, etc..).
- Do not store or never use harsh chemicals, sprays, flammable or non-food in or near the oven. Oven is designed specifically for heating or cooking food. The use of corrosive chemicals in heating or cleaning will damage the unit and may cause injury.
- Should any food inside the oven catch fire, keep the door closed. Switch the oven off and disconnect the power supply.
- Always exercise caution when opening the door. Move to side, open the door slowly to vent the hot air and/or steam. Make sure your face is away from the opening and make sure there are no children or pets near the oven.
- Only use utensils that are suitable for use in this type of oven.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glasssince they can scratch the surface, which may result in shattering of the glass.





How to keep your oven in good condition

Before cleaning your oven, or performing maintenance, disconnect it from the power supply.

To extend the life of your oven, it must be cleaned frequently, keeping in mind that

- The enamelled or stainless steel parts should be washed with lukewarm water without using any abrasive powders or corrosive substances which could ruin them. Stainless steel could get stained. If these stains are difficult to remove, use special products available on the market. After cleaning, it is advisable to rinse thoroughly and dry.
- The inside of the oven should preferably be cleaned immediately after use, when it is still warm, with hot water and soap. The soap should be rinsed away and the interior dried thoroughly. Avoid using abrasive detergents (for example cleaning powders, etc.) and abrasive sponges for dishes or acids (such as lime scale remover, etc.) as these could damage the enamel. If the grease spots and dirt are particularly tough to remove, use a special product for oven cleaning, following the instructions provided on the packet.
- Never use a steam cleaner for cleaning inside of oven.
- If you use your oven for an extended period of time, condensation may form.
 Dry it using a soft cloth.
- There is a rubber seal surrounding the oven opening which guarantees
 its perfect functioning. Check the condition of this seal on a regular basis
 .If necessary, clean it and avoid using abrasive products or objects to do
 so. Should it become damaged, please contact you're nearest After-Sales
 Service Centre. We recommend you avoid using the oven until it has been
 repaired.
- Never line the oven bottom with aluminium foil, as the build up of heat could compromise cooking and even damage the enamel.
- Clean the glass door using non-abrasive products or sponges and dry it with a soft cloth.





Operation

Introduction



Note:

This multifunction oven combines the advantages of traditional convection ovens with those of the more modern fan assisted models in a single appliance.

It is an extremely versatile appliance that allows you to choose easily and safely between different cooking modes. The various features offered by the oven are selected by means of selector knob "B" and thermostat "C" situated on the control panel.



Note:

Before using the oven for the first time we recommend that the oven be switched on and set to it's highest temperature. Keep the oven door closed and leave the appliance on for 30 minutes with nothing in it. Ensure adequate ventilation during this process by opening any doors and windows in the room. Any odours created during this operation will odour to the evaporation of substances used to protect the appliance during storage prior to installation.



Note:

Place the grill pan provided on the bottom shelf of the oven when cooking fatty foods to prevent grease droplets forming on the base of the oven. For all types of cooking never place anything on the bottom of the oven when it is in operation because this could damage the enamel. Place your cookware (dishes, aluminium foil, etc. etc.) on the shelves provided.




Product functions

- > The oven is controlled by a thermostat between 60°C and 250°C, depending on the temperature required. The thermostat pilot light turns on and off to indicate the temperature control during use.
- > The required cooking mode is selected using the multifunctional control button. The functions that may be selected are:

	Oven Light	Turning control knob to this setting, the oven light will illuminate in the oven cavity, and will operate on all selected functions.
	Conventional	Upper and lower heating element come on. Heat is distributed by natural convection and this means the top half of the oven is warmer than the bottom half, food should be placed on a higher shelf if the food is to be crisped. It is recommended that the oven is pre-heated for 10-15 minutes before commencing cooking.
	Lower Heat with Fan	Lower element comes on, heat radiates by force convection. The oven does not require pre-heating
	Top Heat	Top element comes on, heat radiates by natural convection from the top of the oven.
	Grill	Grill element comes on and is dispersed by radiant heat.
	Fan Assisted Grill	Grill element comes on and is dispersed by the rear fan. Even distribution of heat is attained in the cavity.
	True Fan	The circular rear element and fan come on together and the is dispersed by force convection. The oven does not require pre-heating.
*	Defrost	Only the fan comes on and the food is thawed by ventilation without heat.

- > Read the information of the food packaging for the cooking temperatures and times. Once familiar with the performance of the appliance, the temperatures and times may be varied to adapt them to your personal tastes.
- Check that frozen food is completely thawed before cooking, unless indicated otherwise.



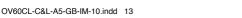

Operation



The information given in the following charts is intended only as a guide. Select the lowest temperature quoted and check the food at the end of the shortest duration quoted.

	CONVENTIONAL						
Cakes/Biscuits	Temperature °C	Shelf Position (Recommended) from the bottom	Cooking Time in min.				
Cake Mixture Desserts in Moulds							
Sponge cake	150 – 170	1	60 – 70				
Marble, nut cake (tin)	150 – 170	1	60 – 80				
Fresh fruit cake (tray)	170 – 190	2	45 – 50				
Flan base	170 – 190	1	20 – 25				
Biscuits (tray)	170 – 190	2	20 – 20				
Sponge cake (3 to 6 eggs)	170 – 190	1	20 – 35				
Swiss roll	180 – 200	1	12 – 16				
Short Pastry Dessert in Moulds							
Tart / flan base	170 – 190	2	15 – 20				
Streusel cake	170 – 190	2	45 – 55				
Cheesecake	170 – 190	2	10 – 20				
Apple pie	170 – 190	1	90 – 90				
Apricot tart with topping	170 – 190	1	55 – 75				
Raised Dough Dessert in M	Moulds						
Streusel cake	170 – 190	1	35 – 45				
White bread	180 – 200	1	40 – 50				
Pizza (tray)	190 – 210	1	35 – 45				
Onion tart	180 – 200	1	25 – 35				
Apple turnovers	160 – 180	2	25 – 30				
Choux pastry, Eclairs	180 – 200	2	25 – 35				
Puff Pastry	190 – 210	2	15 – 25				
Meringues, Macaroons	120 – 140	2	25 – 50				


> Pre-heat the oven for 10 mins.



	CONVENTIONAL			
Food	Recommended shelf level from the bottom	Temperature °C	Time in min.	
Roast beef, approx. 1 kg	1	190 – 210	100 – 120	
Beef fillet, approx. 1 kg	1	200 – 220	45 – 55	
Venison, approx. 1 kg	1	190 – 210	90 – 120	
Pork joint, approx. 1 kg	1	200 – 220	100 – 120	
Pork joint, approx. 2 kg	1	180 – 200	120 – 150	
Ham joint, approx. 1 kg	1	200 – 220	60 – 70	
Meat loaf, approx. 1 kg	1	190 – 210	70 – 80	
Veal, approx. 1.5 kg	1	190 – 210	100 – 120	
Leg of lamb, approx. 1.5 kg	1	220 – 220	90 – 120	
Rack of lamb, approx. 1.5	1	190 – 210	50 – 60	
Poultry, 0.8 – 1 kg	1	190 – 210	60 – 70	
Poultry, approx. 2 kg	1	190 – 210	90 – 110	
Poultry stuffed, approx. 2	1	190 – 210	110 – 130	
Poultry, approx. 4 kg	1	180 – 200	150 – 180	
Fish, whole, approx. 1.5 kg	1	190 – 210	35 – 55	

- Pre-heat the oven for 10 mins.
- Read the information of the food packaging for the cooking temperatures and times. Once familiar with the performance of the appliance, the temperatures and times may be varied to adapt them to your personal tastes.
- Check that frozen food is completely thawed before cooking, unless indicated otherwise.



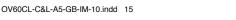



Operation



	TRUE FAN MODE						
Cakes / biscuits	Temperature Shelf Position (Recommended) from the bottom		Cooking Time in min.				
Cake Mixture Desserts in Moulds	Cake Mixture Desserts in Moulds						
Sponge cake	150-170	1	60-70				
Marble, nut cake (tin)	150-170	1	60-80				
Fresh fruit cake (tray)	150-170	1	35-45				
Flan base	150-170	1	25-30				
Biscuits (tray)	150-170	1, 3	20-25				
Sponge cake (3 to 6 eggs)	160-180	1	25-35				
Swiss roll	160-180	1	20-25				
Short Pastry Desserts in Moulds							
Tart / flan base	150-170	1	20-25				
Streusel cake	150-170	1	45-55				
Cheesecake	150-170	1	70-90				
Apple pie	150-170	1	50-70				
Apricot tart with topping	150-170	1	55-75				
Raised Dough Desserts in Moulds							
Streusel cake	150-170	1	35-45				
White bread	160-180	1	40-50				
Pizza (tray)	170-190	1	35-45				
Onion tart	170-190	1	35-45				
Apple turnovers	150-170	1, 3	25-30				
Choux pastry, Eclairs	160-180	1, 3	30-40				
Puff pastry	170-190	1, 3	20-25				
Meringues, Macaroons	120-140	1, 3	25-50				
Poultry, approx. 4 kg	160-180	1	150-180				
Fish, whole, approx. 1.5 kg	160-180	1	35-55				

- 1) Pre-heat the oven.
- 2) Unless otherwise stated, the times given are for an oven which has not been pre-heated.

Food to be grilled	Recom- mended shelf level from the bottom	GRILL		FAN GRILL	
		Temperature setting	Total grilling Time in min.	Temperature setting	Total grilling Time in min.
Thin cuts					
Steak	3 or 4	maximum	10-16	maximum	20-25
Kebabs	3	maximum	25-30	maximum	16-20
Chicken kebabs	3	maximum	20-25	maximum	23-27
Cutlets/schnitzel	3 or 4	maximum	12-18	maximum	23-27
Liver	3 or 4	maximum	8-12	maximum	12-15
Burgers	3 or 4	maximum	14-20	maximum	18-22
Sausages	3 or 4	maximum	10-15	maximum	9-13
Fish fillet	3 or 4	maximum	12-16	maximum	13-18
Trout	3 or 4	maximum	16-20	maximum	20-25
Toast	3 or 4	maximum	2-4	maximum	3-6
Cheese toast	3 or 4	maximum	7-9	maximum	5-8
Tomatoes	3 or 4	maximum	6-8	maximum	8-10
Peaches	2	maximum	6-8	maximum	15-20
Thicker cuts					
Chicken (approx. 1 kg)	1	maximum	50-60	maximum	60-85
Rolled meat, 7 cm (approx. 1 kg)	1	maximum	75-85	maximum	100-110
Pork (approx. 1 kg)	1	maximum	100-120	maximum	95-100
Sirloin (approx. 1 kg)	1	-	-	maximum	25-35

- Turn half way through the grilling time. 1)
- 2) Select the appropriate shelf level for the thickness of the food.
- Use the 2nd shelf level from the bottom for "Fan grill". 3)








3-key timer procedure cooking mode

Adjust the clock after switch on

Once it connected with electrical power, the display will show "12:00" with the square symbol above " ()".

Press the + or - button will increase or decrease the number until it reaches the right time. After 5 seconds it will start automatically.

Function button

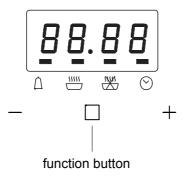



Note

The time should be set before any operation of the oven which is controlled by the electrical control.

If you want to change the time, press the function button repeatedly until the square symbol above the flash. Then you can adjust the time.

Automatic setting (set the time of full automatic starting and ending)

- 1. Press the function button repeatedly until the square symbol above the " issue a square symbol above the " issue a square symbol above the square
- 2. Press the function button repeatedly until the square symbol above the " The square symbol above the " The square symbol above symbol above the square symbol above the square symbol above symbol above symbol above symbo
- 3. Adjusting the baking method (thermostat, oven operation setting).

When the time is up, the alarm will sound, press any button to cancel the alarm. **Remark:** The maximum between current time and off time is 23 hours 59 minutes.

For example: If the food is required to bake for 45 minutes, and it is supposed to stop at 14:00.



Semi-automatic setting

Setting the required time frame for baking (10 hours maximum)

- Press the function button repeatedly until the square symbol above " ", and set the required time using the + and buttons.
- Adjusting the baking method (thermostat, oven operation).
- When the baking is done the alarm will sound. To cancel the alarm press any button.

Timer

• The longest time frame can be set is 23 hours and 59 minutes. For setting time, press the function button repeatedly until the square symbol above " \(\int \) " flashes, and press "+ or - button until the desired time shows on the display. The time countdown begins to work. When it reaches the set time, the alarm sounds. To cancel the alarm press any button.



Note!

Once a function has been selected, setting the time needs to be started within 5 seconds. If the power fails unexpectedly all programmes and the set time will be cancelled.

Once power has been restored "12:00" and the square symbol above " \bigcirc " will show on the display. You will need to reset the time and any programmes required.





Operation

Cooling ventilation

- In order to cool down the exterior of the appliance, this model is equipped with a cooling fan, which comes on automatically when the oven is hot.
- When the fan is on, a normal flow of air can be felt exiting between the oven door and the control panel

Practical cooking advice

The oven offers a wide range of alternatives which allow you to cook any type of food in the best possible way. With time you will learn to make the best use of this versatile cooking appliance and the following directions are only a guideline which may be varied according to your own personal experience.

Using the oven light [*]

Set knob "B" to the " * " symbol to turn it on. It lights the oven and stays on when any of the electrical heating elements in the oven come on.

Using the conventional oven



This is traditional convection cooking using the top and bottom elements and the heat is diffused by natural convection. This mode is recommended for foods that require the same temperature both internal and external such as roast.

Using the low heat with fan mode

This mode uses the lower heating element and fan to circulate the air and is ideal for pizzas, pastries and cakes. It is recommended for foods that require more meat to be from the bottom of the oven.

Using the top heat mode f

This function uses the top .element only. Idea for browning the top of food.

Using the grill

To use the grill ensure that your food is located in the centre of the oven cavity and adjust the height of the grill pan to control the browning.





Using the fan assisted grill 🕱

Use the grill in the same way as the standard grill but ensure the door is closed. This mode is recommend for quick browning on the outside but keeping the juices in. Ideal for chops and burgers.

Using the true fan mode 😭

The rear circular element and the fan come on and the heat is dispersed by forced convection. This mode is suitable for roast joints when you want it well cooked on the outside and tender in the middle. The oven does not need any preheating when using this mode.

Using the defrost mode [

In this mode only the oven fan comes on. This mode is suitable for the quick thawing of frozen foods. Thawing times vary depending on the quantity and type of food to be defrosted.



Note!

When cooking is done, the fan stays on until the oven cools down sufficiently.





Care and maintenance

In more detail...

□

Care and maintenance



Warning

Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact customer services.





Caution

Do not use hot water, diluents, petrol, alcohol, kerosene, washing powder, cleanser, alkaline detergent, acid, chemical cloth, etc. for cleaning so as not to damage the enamel coating and plastic. The appliance must not be cleaned directly with water as this could cause rusting or render the insulation less efficient.

- The enamelled and stainless steel parts of the appliance should be wiped clean using a damp cloth using the minimum possible amount of soap and lukewarm water. Do not use abrasive powders or corrosive substances which could ruin the surfaces. Remember stainless steel could tarnish and restoring these surfaces can be difficult. Specialist stainless steel cleaners are available from major supermarkets. After cleaning these surfaces should be wiped with a clean cloth and lukewarm water to remove any traces of detergent.
- The inside of the oven should ideally be cleaned when the oven is still warm using a damp cloth and the minimum possible amount of soap and hot water. After cleaning the soap should be removed using a clean damp cloth and hot water. Dry the interior of the oven with a soft dry cloth after cleaning.



Warning!

DO NOT USE EXCESSIVE AMOUNTS OF WATER WHEN CLEANING THE PRODUCT.

Do not use abrasive powders, cleaners, sponges or acids (lime scale remover) to clean the interior as these can damage the enamel. If the interior is very difficult to clean use a specialist oven cleaner. Follow closely the instructions provided on the packaging.



Warning!

NEVER USE A STEAM CLEANER TO CLEAN THE INSIDE OF THE OVEN.

If the oven is in use for an extended length of time condensation may form. Once the oven has cooled remove the condensation using a dry cloth.



Troubleshooting

What should I do if the oven doesn't heat up?

Check to see if one of the following actions resolves the issue:

- The oven may not be switched on. Switch the oven on.
- The clock may not be set. Set the clock (see section "Setting the clock").
- Check to see if the required settings have been applied.
- A household fuse may have blown or a circuit breaker may have tripped.
 Replace the fuses or reset the circuit. If this happens repeatedly, call the Service Centre.

What should I do if, even though the oven function and temperature have been set, the oven does not heat up?

There may be problems with the internal electrical connections. Call your the Service Centre.

What should I do if the time display is blinking?

There was a power failure. Set the clock (see section "Setting the clock").

What should I do if the oven light does not illuminate?

The oven light is faulty. Replace the oven light bulb (see section "Changing the lamp").

What should I do if the oven's fan is running without having been set?

Following use, the oven's fan runs until the oven has cooled down. Call your local service centre if the fan continues to run after the oven has cooled down.

The grill does not heat up properly?

The grill power is set to low, turn the temperature control knob to maximum.





CE Declaration of Conformity

CE Declaration of Conformity

CE

MANUFACTURER: CATA

ADDRESS: C/ Ter nº 2, Torelló 08570 - Barcelona (Spain)

We hereby certify that the mentioned accessory complies with the essential requirements of the European Directives applicable, including their modifications and the corresponding transpositions from the national law.

MACHINE APPLICATION: OV60CL

TYPE: Multifunction oven

Comply with the European Directives 2006/95/CE: LVD and

EC DIRECTIVES APPLIED: the 2004/108/CE: EMC

APPLIED HARMONIZED STANDARDS:

EN 60335-2-25/A2:2006 EN 60335-2-6/A2:2008 EN 60335-1/A13:2008

EN 60335-1/A13:2008 EN 62233:2008

APPLIED INTERNATIONAL TECHNICAL

STANDARDS AND SPECIFICATIONS: ISO9001.2008

PLACE: Torelló David Sala Technical Manager

This appliance respects laws of the suppression of radio-interference. The Manufacturer has a policy of continuous product improvement, it reserves the right to adapt and carry out any modification considered necessary without prior warning.

B&Q plc, Chandlers Ford, Hants, SO53 3LE United Kingdom www.diy.com





01

Only a qualified person in compliance with the instructions provided must install the appliance. The manufacturer declines all responsibility for improper installation, which may harm persons and animals and damage property.




Caution

The power supply to the appliance must be cut off before any adjustments or maintenance work is done on it.

Installation of Built-in Ovens

For correct installation this product can be fitted under the work surface in a built under housing unit or in a tall oven housing unit.

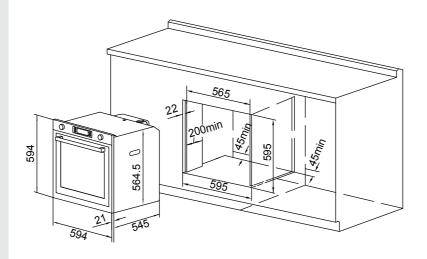



Note!

• The panels of the adjacent cabinets must be made of heartresistant material. In particular the adhesive that bonds the plastic laminate to the furniture must be able to withstand temperatures of not less than 150°C to avoid delamination. The appliance must be housed in heat-resistant cabinets.



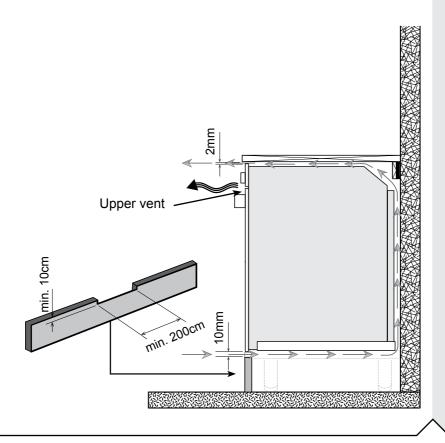


Figure above shows the air circulation requirements including a slot that should be cut into the plinth if fitted.

It is essential when installing your oven there is adequate air circulation around the appliance to ensure the correct operation of the appliance. Inadequate air circulation will greatly impair the performance of the appliance and can affect adjacent cabinets due to the rise in temperature.



Electrical connection




All installation work must be carried out by a competent person or qualified electrician.

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the cooker hood.

Warning: THIS APPLIANCE MUST BE EARTHED.

Mains Supply could be connected to the Mains Voltage by Direct Connection

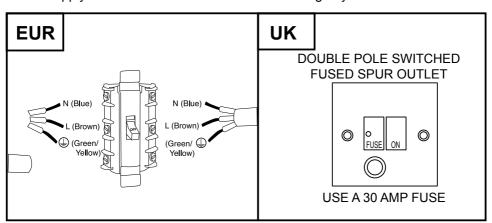



Warning

Make sure the fused spur outlet is located in an accessable position.

Direct Connection

If the appliance is being connected directly to the mains an omnipolar circuitbreaker must be installed with a minimum opening of 3mm between contacts.

If the cable is damaged or to be replaced, the operation must be carried out the by a qualified electrician with dedicated tools to avoid any accidents.

The installer must ensure that the correct electrical connection has been made and that it complies with wiring diagram.

The cable must not be bent or compressed.

The cable must be checked regularly and replaced by authorized technicians only.









Electrical Requirements

Any permanent electrical installation must comply with the latest I.E.E. Regulations and local electricity company regulations. For your own safety a qualified electrician or contractor who is on the roll of the National Inspection Council for Electrical Installation Contracting (NICEIC) should undertake the electrical installation.

Electrical Connection

Before connecting the mains supply ensure that the mains voltage corresponds to the voltage on the rating plate inside the appliance.

WARNING: THIS APPLIANCE MUST BE EARTHED

The appliance is supplied with a 3-core mains cable and must be connected to the electricity supply via a double pole switch having a 3mm minimum contact gap on each connector.

For UK only

A Switched Fused Connection Unit to BS 1363 Part 4 is recommended.

The fuse must be rated at 30 Amps.

The wires in the mains lead are coloured in accordance with the following code:


Brown = L - Live

Blue = N - Neutral

Green and Yellow = 🕒 - Earth


The connection point must be placed in a position adjacent to the appliance so as to be readily accessible for an engineer in the event of a breakdown.

Disconnect the appliance from the mains supply before carrying out any kind of maintenance or cleaning.

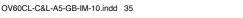



Fixing the double oven

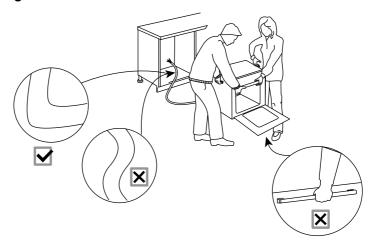


Connect to mains power supply ensuring the cable is not bent. Lift oven into housing unit, do not lift the oven with the handle otherwise the glass door might shatter.



Note: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.





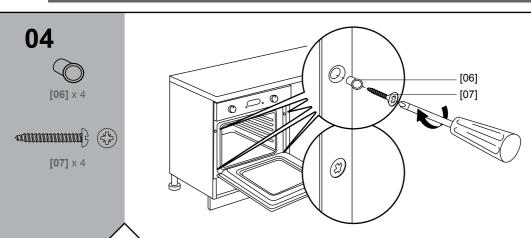


Once the oven has been lifted into place in either of the housing units insert the 4x plastic washers [06] into the holes located within the sides of the metal casing of the oven and secure with 4x screws [07].

Also ensure that you adjust the furniture doors adjacent to the sides of the oven so there is a 4 - 6mm gap between them, otherwise heat displaced from the oven might damage the furniture door.

The appliance is now ready to use.





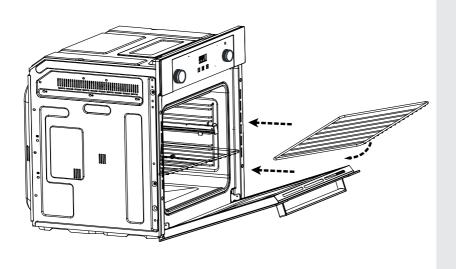

Adjusting the shelf position.



Notes





Notes

(









B&Q plc, Chandlers Ford, Hants, SO53 3LE United Kingdom www.diy.com



